



OVERHEAD DOOR PERFORMANCE
Best Sealing System Ever Made!

Go to GreenHingeSystem.com
 for an installation video.

Tools Needed:

- Combination Wrench and Socket Set.



Step 1:

Recommended to watch installation video on our website at GreenHingeSystem.com. Identify your existing hinge matches the bolt pattern measurement guide.

Note: Only hinges with rollers get replaced.

Step 2:

Before removing any of your existing hinges sort out your new Green Hinge System. Each hinge has a number and should be installed in the corresponding position.

EXAMPLE: If you ordered a 4 panel system you have 2 hinges of each number marked 1, 2, & 3 (6 total hinges). If you ordered a 5 panel system you have 2 hinges of each number marked 1, 2, 3, & 4 (8 total hinges) Refer to the diagram above for proper installation location.

Warning: Hinge numbers do not interchange.

Note: Your existing #1 hinge has only 1 tube. Green Hinge #1 hinge has 2 tubes.

Step 3:

If your door is connected to an automatic opener, be sure to disengage the opener and disconnect power before beginning work. If you do not have an automatic opener continue to step 4.

Step 4:

Starting with the #1 hinge (located at the top of the lower panel) remove the existing hinge and remember to keep the fasteners and roller (you will reuse these). Insert the roller into the Green Hinge #1 and place into the track and using the fasteners, bolt in your new Green Hinge #1 in that location. Repeat this process for the rest of your hinges.


Warning: Do not replace more than one hinge at a time.

Step 5:

When all hinges are in place, you're ready to test the door for proper operation. Operate it manually several times before returning power to the opener. You are now ready to enjoy your new Green Hinge System!


INSTALLATION INSTRUCTIONS

Diagram is an illustration of up to a 14' high door

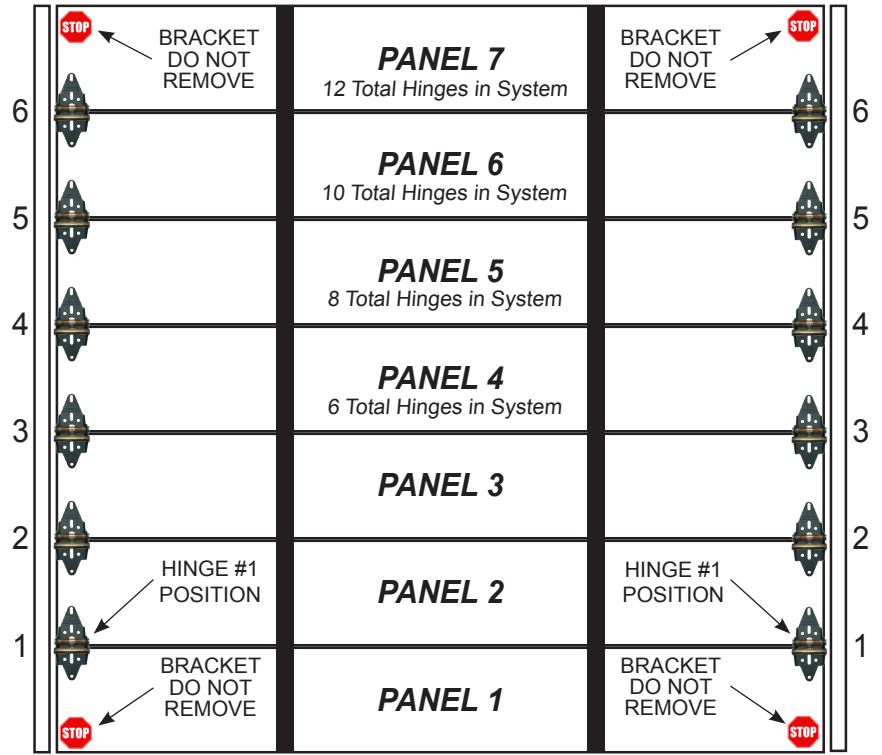

Inside view of overhead door

Hinge must be installed in this position

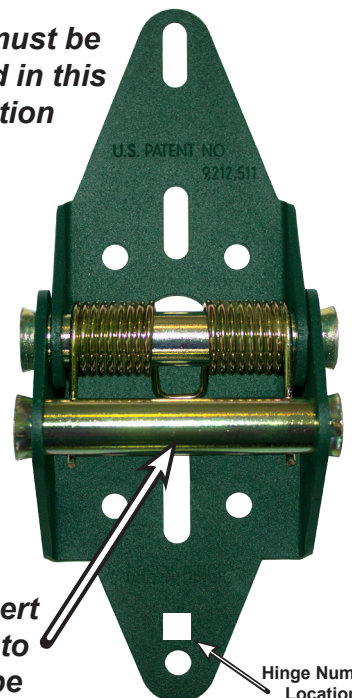

Professional Installation Recommended

* Single hinges that are sold separately are for replacement use only.

NOTE: Silver springs are for residential doors under 12' wide, Gold springs are for commercial doors and residential doors 12' wide and over.